

INSTALLATION RECOMMENDATIONS FOR DELMO SPEED 73-87 CHEVY C10 EXTERIOR DOOR HANDLES

Included Parts List:

- (1) Driver Side Door Handle
- (1) Passenger Side Door Handle
- (2) Buttons
- (2) Roll Pins
- (2) Cam return springs
- (1) Handle cutout template
- (4 sets) Handle hardware *Note: flat washers may not fit on all vehicles depending on the outer door seam.*

****Important Note: Due to the age of the vehicle and wear & tear of daily use, some parts may require extra adjustment or extra steps may be required to insure correct fitment.****

Step 1 - Remove interior door panel :

Step 2 - For easier access remove interior door handle clip and rod (Pic 1 & 2)



Pic 1



Pic 2 - clip

Step 3 - Remove exterior door handle clip and rod in order to remove handle

Step 4 - Remove factory roll pin from factory door handle (Pic 3) in order remove lever.



Pic 3 - roll pin


Step 5 - In some cases it might be necessary to trim part of the factory lever for clearance. See shaded area on (Pic 4)

Step 6 - Using the new roll pin and spring provided, install the factory lever into the new billet handle.



Pic 4

Step 7 - Using the template provided, remove material from the door skin to allow fitment of our new designed larger button area. This can be accomplished with a rat tail file or Dremel tool. See arrows on (Pic 5)

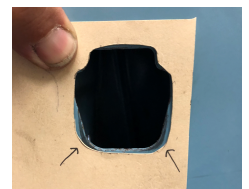

Pic 5 - template

Step 8- After installing the rod thru the factory lever, Install the new billet handle and attach the rod to the latch assembly.

Step 9- Test handles for proper operation prior to installing door panels and trim.